

Coloured Teepee



Parts List:

2x 40mm Screws
9x 60mm screws
12x 80mm Screws

Required Tools

Drill or Screwdriver
2 Adults are needed to assemble this product




1. Place the base on a flat level surface, make note of which side is the front. Place side panels on the base and lean together until they touch at the top, ensure triangular brace is at the front.
2. Screw side panels to the base using 2x 60mm screws on each side. Use 80mm Screws on the front and back corners, securing the base to the side panels (4x 60mm screws 4x 80mm screws).

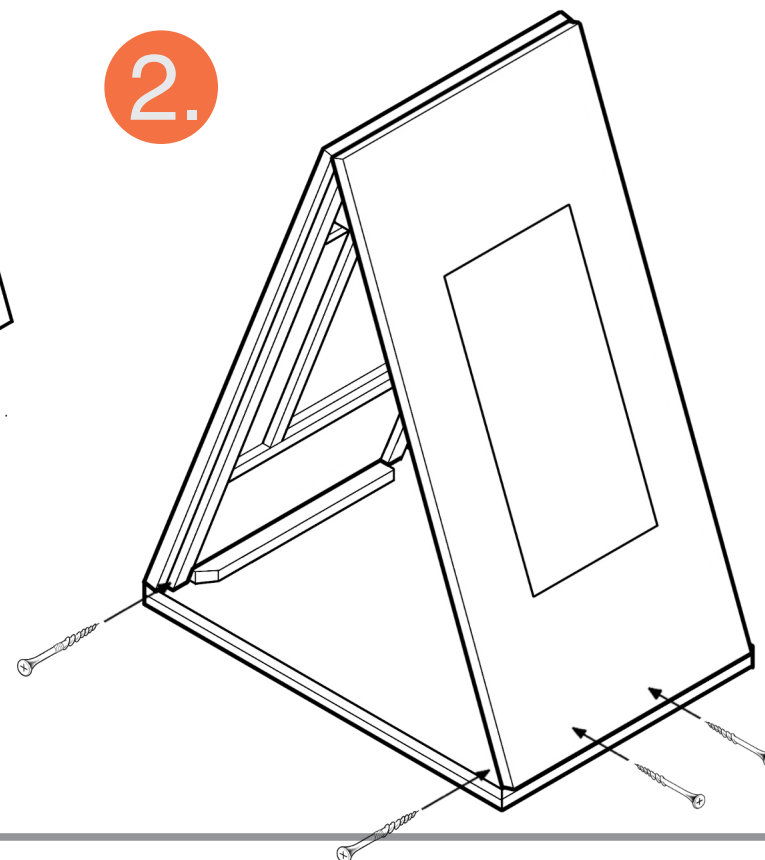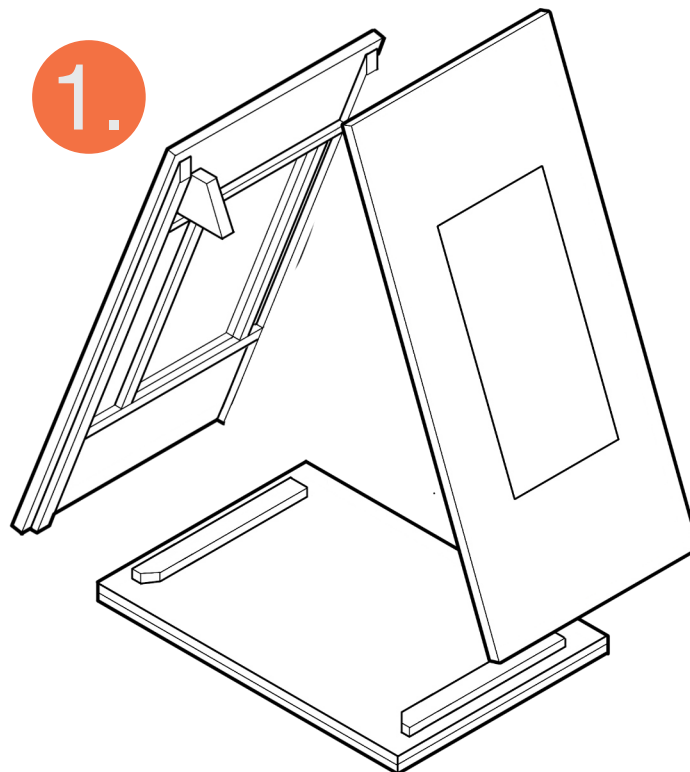

3. Fix the internal brace with 2x 60mm screws, (brace is fixed to one side panels upon purchase)

4. Assemble triangular back panel, screw together using 2x 80mm screws in predrilled holes.

5. Fit back panel to base, and fix with 3x 60mm Screws in the predrilled holes. Use 3x 80mm screws to fix back to side panel as shown in the diagram. Repeat for the opposite side. (2x 80mm screws in top section, 4x 80mm screws in bottom section.)

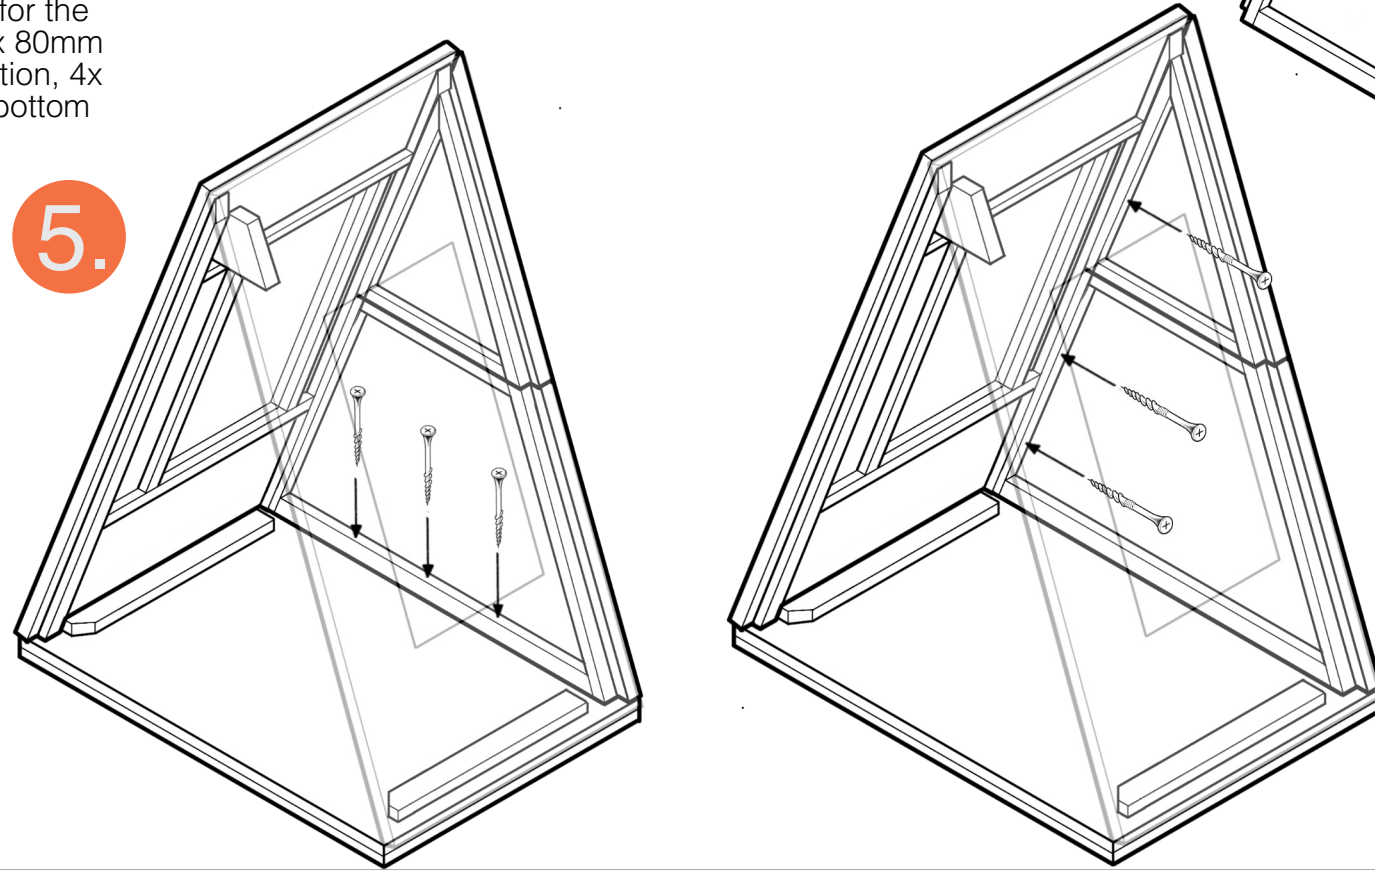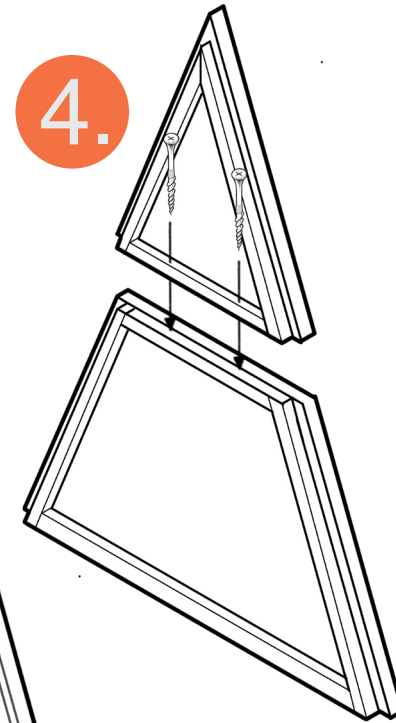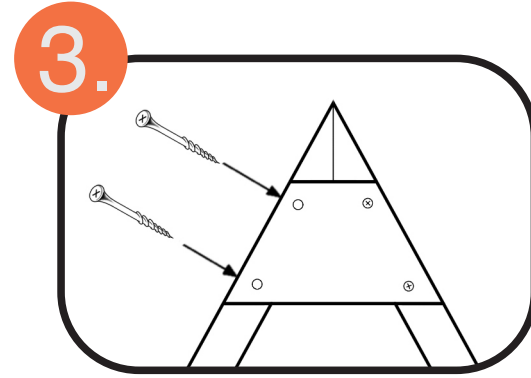

6. Fix top diamonds into position, front and back, using 2x 40mm screws for each.

