Freestanding Mirror


Parts List:


8x 60mm Screws


Required Tools

Drill or Screwdriver

1. Place the window either landscape or portrait which ever you prefer.
2. Attach first support, using 2x 60mm screws into pre-drilled holes on the diagonal support beams, and 2x 60mm Screws into pre-drilled holes on the horizontal beams.
3. Repeat pervious step on opposite side.

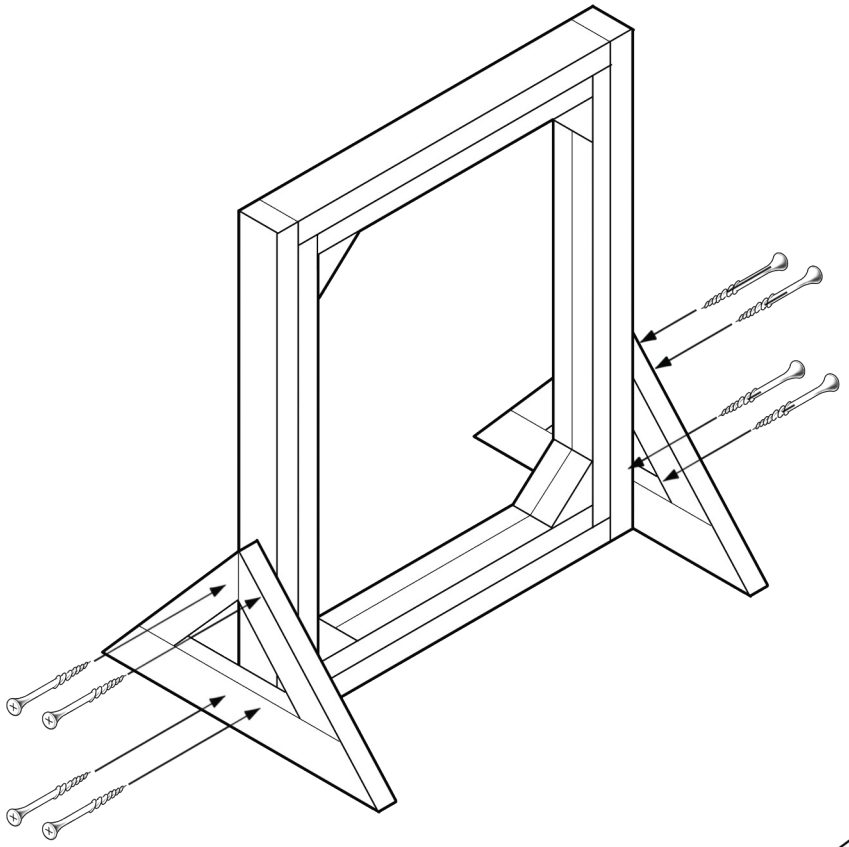

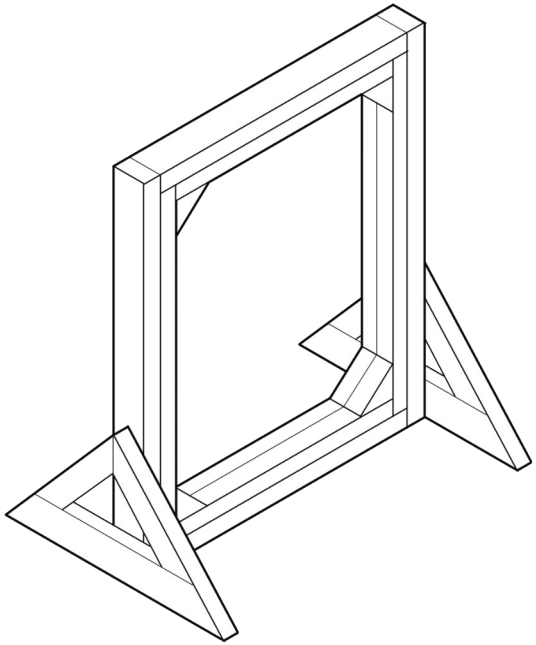

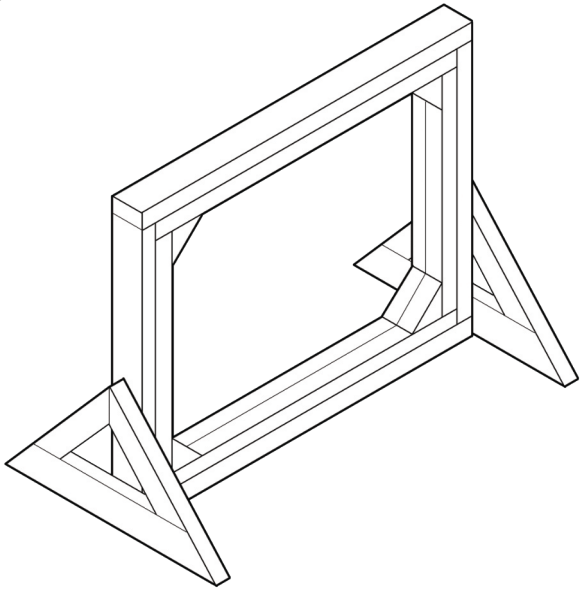

NEWBY LEISURE LIMITED